

# Easy steps to 'ProxTalking'

Press a **Sound** tag on any button. The ProxTalker will recognise the tag and produce the stored sounds. The tags can be placed and pressed in sequence or individually.



## Record New Sounds

-**press** the **Record** Programming tag on any button

-next **press** the **Sound** tag to be recorded\*  
(\*press and release sound tag for 2 second recording or

\*press and hold sound tag for up to 8 second recording)

-follow the verbal instructions to record sound  
n.b. **You cannot record different sounds on two tags with the same code**



## Erase Sounds

-**press** the **Erase** Programming tag on any button

-next **press** the **Sound** tag you want to erase  
*The tag will have reverted to original sound which may be blank*



## Change Volume

- **press** the **Increase** or **Decrease** Programming tag on any button to change the volume


*A double bleep indicates top or bottom of volume range*



## Check Battery

- **press** the **Battery** Programming tag on any button

*The ProxTalker will tell you how much battery life is left e.g. '95%'*

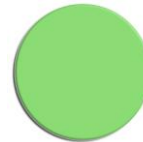

## Speak All

Placing this function tag on any button will result in all tags on the ProxTalker buttons being played automatically in sequence from left to right.

visit [www.proxtalker.com](http://www.proxtalker.com) to download free tag making resources